

1. Cut the Indicative Seal using bolt or wire cutters.
2. Pull the Horizontal Bolt out from right to left.
3. Pull the Header Cable up and out of the small hole on top.
4. Pull the Header Bolt up and out of the larger hole on top.

