



Seal

- 1 Slide window **A** to left. Push **T** toggle switch to ON.
- 2 Slide window **A** to right. Insert **C** cable header to engage. Then pull **S** square bolt.
- 3 Insert **H** bolt & seal with **B** barrel. Then insert **C** cable tip to locking chamber & pull right.

Unseal


- 1 Cut **H** bolt.
- 2 Remove **H** bolt. Push **S** square bolt. Remove **C** cable tip & header.
- 3 Slide window **A** to left. Push **T** toggle switch to OFF.

ENVOTECH

Set device outside with clear sky view




Open top sliding panel

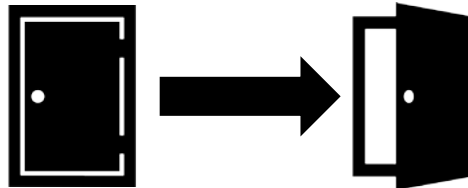



Flip power switch to "ON"



Wait for device to obtain signal – LED Display **Green**

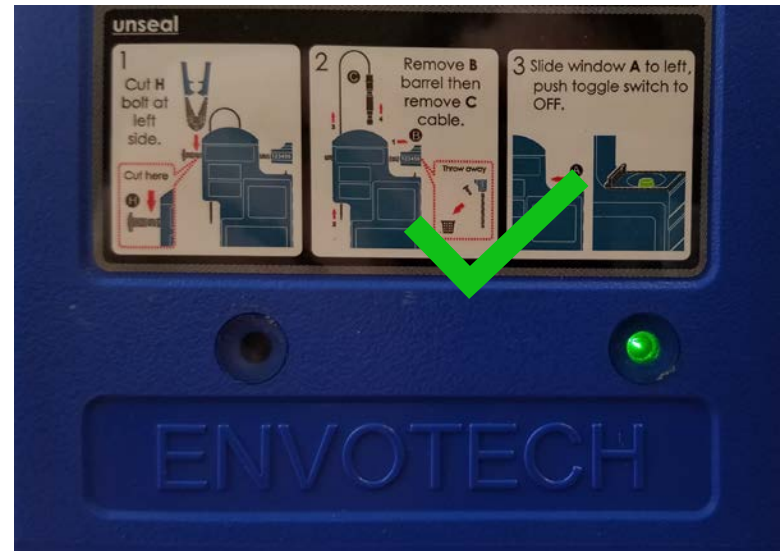


Close top panel

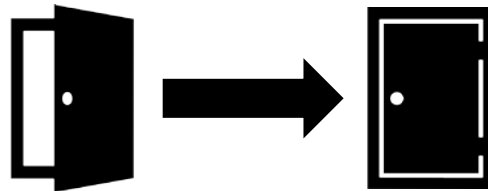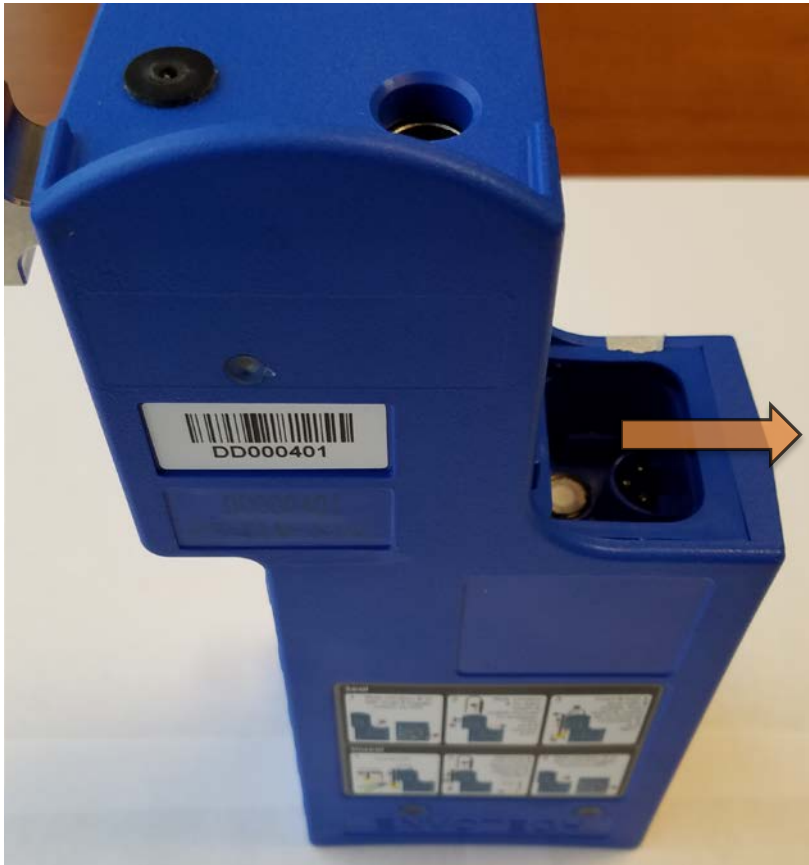


Insert cable



Pull Bolt Slide

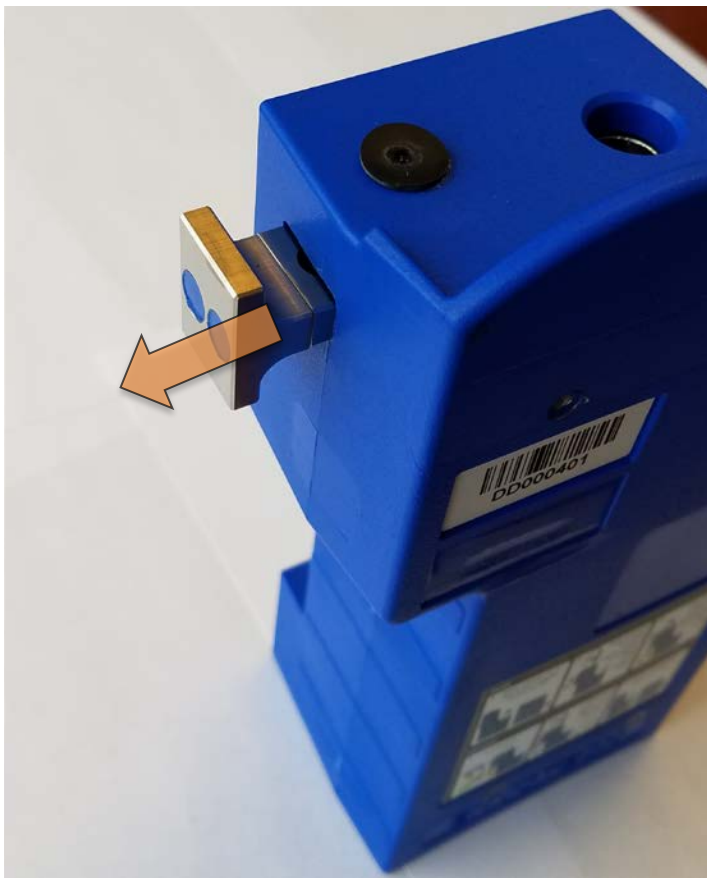

Insert Customs Bolt

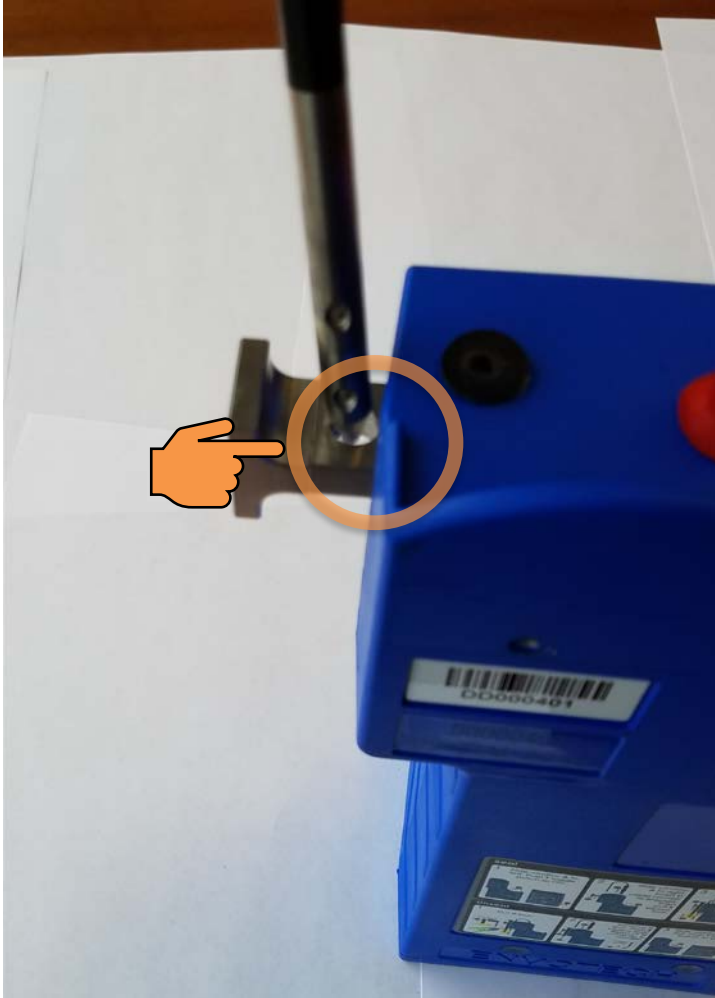

Insert Indicative Seal



Loop cable onto container – Pull through





AKUA
SECURE LOGISTICS